Installation Instructions


#10 X 82° FLAT SOCKET HEAD SCREWS-NOT SUPPLIED.

FRONT OF SLIDE.

ACCESS HOLE.

NOTES:

- 1. NO MOUNTING HARDWARE SUPPLIED
- 2. SLIDE DESIGNED FOR COMPRESSION LOADING ONLY.

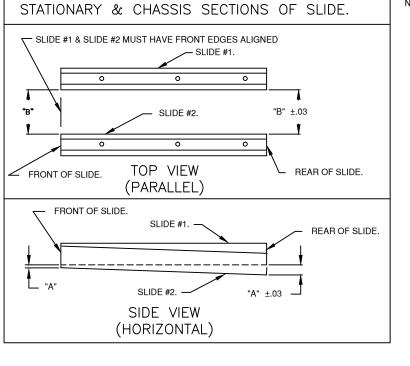

RECOMMENDED TOLERANCE FOR MOUNTING

Important Installation Note!! Slides Must Be Parallel To Each Other To Function/Lock Correctly. Mount Slides Loosely, Assemble **Drawer/Chassis To Slides And Cycle Assembly Before Tightening To Ensure Parallelism.**


USE .31 HEX TOOL FOR REMOVAL AND REINSTALLATION OF SOCKET HEAD CAP SCREW PERMITTING CHASSIS SECTION TO BE DISCONNECTED FROM SLIDE AND MOUNTED TO CUSTOMER MOBILE (CHASSIS) UNIT. SCREW MAY BE REINSTALLED FROM EITHER SIDE OF SLIDE (ELIMINATES LEFT OR RIGHT HAND). THE USE OF A QUALITY ADHESIVE IS RECOMMENDED TO LOCK SCREW IN PLACE.

REAR OF SLIDE.

STATIONARY SECTION

WITH SLIDE COMPLETELY CLOSED, DEPRESS HANDLE AND BEGIN MOVEMENT TO RELEASE FROM LI (LOCK-IN) POSITION.

DEPRESS HANDLE AND BEGIN MOVEMENT TO RELEASE FROM LO (LOCK-OUT) POSITION.

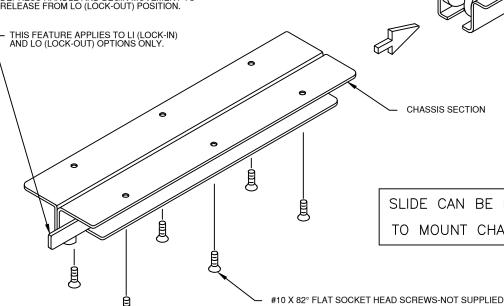

SLIDE CAN BE DISASSEMBLED TO MOUNT CHASSIS SECTION

CHASSIS SECTION

C-938/C-938-XX-LI-LO MOUNTING

(CC5200 & CC5201 SERIES SLIDES)



CHASSIS TRAK® Telescoping Slides

www.generaldevices.com

If you have questions please call 317-897-7000 or send e-mail to sales@generaldevices.com