

# C-990

(VC4803-00-0000)

## QUICK DISCONNECT CABLE CARRIER

### MOUNTING INSTRUCTIONS:

1. Locate bracket "A" at the rear of the stationary section of the slide.

Use the same holes used for the slide rear mounting bracket.

2. Drill and countersink far side two holes at the rear of the intermediate section for #8-32 x 1/2 FHMS on .500 centers and attach bracket "B".

3. Attach the "Quick-Disconnect" bracket C to the rear of the chassis.

This requires two holes to be drilled in the chassis for #10-32 screws.

4. Attach the cable, leaving 6 to 8 inches of slack, in a loop, around the intermediate section of the cable carrier. This is required for full extension.


### BILL OF MATERIAL:

1. C-990 Cable Carrier (1)
2. Hardware package (1)

### HARDWARE PACKAGE CONSISTS OF:

ITEM	QTY
#10-32 x 1/2 PHILIPS PHMS	4
#10-32 Keps Nuts	4
#80-32 x 1/2 FHMS 100°	2
Spacer (VA8232-00-0008)	2

\*\*Subject to change without notice

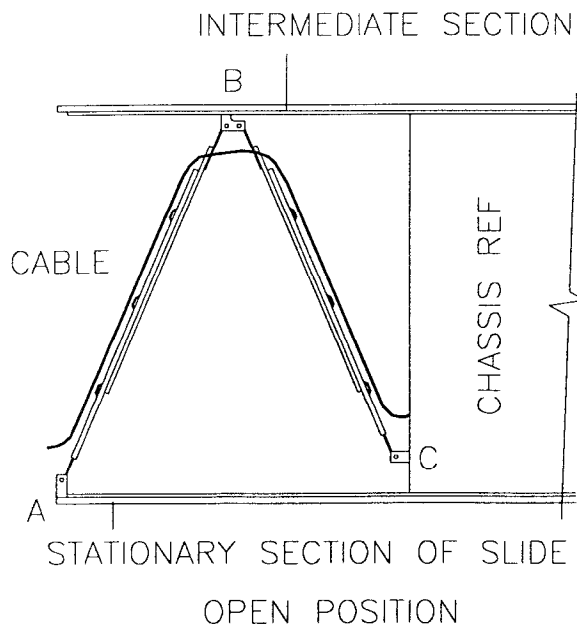

CABLE 6 TO 8 INCHES  
OF SLACK

